

INTERCEPTOR BEAR 650 PMS India

Periodic Maintenance

S. NO.	DESCRIPTION	PERIODICAL MAINTENANCE (Whichever is earlier)											
		Km (x1000)	0.5	5	10	15	20	25	30	35	40	45	50
		miles (x1000)	0.3	3	6	9	12	15	18	21	24	27	30
		Months	1.5	6	12	18	24	30	36	42	48	54	60
1	Engine Oil (#)	R		R		R		R		R		R	
	Check level at every 1000 km or earlier and top up as required												
2	Engine Oil (#)	R		R		R		R		R		R	
3	Inlet and exhaust valve clearance			I		I		I		I		I	
4	Spark Plug	I	I	I	I	R	I	I	I	R	I	I	I
5	HT Lead	I	I	I	I	I	I	I	I	I	I	I	I
6	6 Rubber hose, Air filter to throttle body	I	I	I	I	I	I	I	I	I	I	I	I
7	Rubber hose, Inlet manifold / Adapter	I	I	I	I	I	I	I	I	I	I	I	I
8	Evaporative emission equipment rubber hoses	I	I	I	I	I	I	I	I	I	I	I	I
9	Fuel filter external					R				R			
10	Air filter element	C	C	R	C	R	C	R	C	R	C	R	C
	Clean / Replace more frequently if operated in dusty condition												
11	Vent pipe under air filter box	I	I	I	I	I	I	I	I	I	I	I	I
12	Accelerator and throttle pulley cables free play	A	A	A	A	A	A	A	A	A	A	A	A
13	Clutch cable / lever free play	Adjust every 1000 km or earlier as required											
14	Hand levers pivot point	Lubricate every 1000 km or earlier as required											
15	Brake pads - Front and Rear	I	I	I	I	I	I	I	I	I	I	I	I
16	Disc brake fluid level - Front and Rear	I	I	I	I	R	I	I	I	R	I	I	I
17	Rear brake pedal and gear change pedal pivot	L	L	L	L	L	L	L	L	L	L	L	L
18	Brake hose and banjo bolt - Front and rear	I	I	I	I	I	I	I	I	I	I	I	I
19	Headstock bearings	I	I	I	I	I	I	I	I	I	I	I	I
20	Rear wheel drive chain	Lubricate and adjust every 1000 km/clean, lubricate and adjust every service or earlier as required											
21	Rear wheel cush rubbers				I					I			
22	Spokes tightness/wheel rim run out front and rear (It is applicable for spokes wheel model)	I	I	I	I	I	I	I	I	I	I	I	I
23	Battery terminals (apply petroleum jelly)	I	I	I	I	I	I	I	I	I	I	I	I
24	Earth wire eyelet tightness			I		I		I		I		I	
25	Tyre wear pattern front and rear	I	I	I	I	I	I	I	I	I	I	I	I
26	Pivot-side stand	L	L	L	L	L	L	L	L	L	L	L	L
27	Rider and pillion footrest pivot	L	L	L	L	L	L	L	L	L	L	L	L
28	All mounting fasteners in vehicle for tightness**	I	I	I	I	I	I	I	I	I	I	I	I

A : Adjust C : Clean I : Inspect (Clean, Adjust, Lubricate or replace if necessary) L : Lubricate R : Replace

(#) - After first service, engine oil and engine oil filter replacement is a mandatory at every 12 months even the vehicle has not covered the specified kilometre.

(**) - If any fastener found loose tighten to the specified torque.

NOTE -For maintenance after 50,000 km, please repeat the same frequency specified above, in consultation with a Royal Enfield Authorised Dealer / Service Centre.