

No.	Description	Km (x1000)	0.5	5	10	15	20	25	30	35	40	45	50
		Months	1.5	6	12	18	24	30	36	42	48	54	60
1	Engine Oil (Level check/replace)	R	I		R	I		R	I		R	I	R
		Check level at every 1,000 km or earlier and top up as required											
2	Engine oil filter element	R			R		R		R		R		R
3	Engine oil strainer on crankcase LH	C			C		C		C		C		C
4	Inlet/exhaust tappet setting				I&A		I&A		I&A		I&A		I&A
5	Rubber hose-intake adapter	I	I		I		I	I	I	I	I	I	I
6	Evaporative emission equipment rubber hoses & drain the overfilled by removing plug	I	I		I		I	I	I	I	R	I	I
7	Spark plug				C&A		R		C&A		R		C&A
8	HT lead for crack	I	I		I		I	I	I	I	I	I	I
		C	C		R		C		R	C	R	C	R
9	Air filter element												
		Clean / Replace more frequently if operated in dusty condition											
10	Vent pipe under air filter box	I	I			I	I	I	I	I	I	I	I
11	Starter motor & starter relay connection	I	I		I		I	I	I	I	I	I	I
12	Battery terminals (apply petroleum jelly)	C	C		C		C	C	C	C	C	C	C
13	Earth wire eyelet contact						I						I
14	Injector Horse	I	I		I		I	I	I	I	I	I	I
15	Fuel filter in fuel pump								R				
16	Front fork oil	I	I		I		R	I	I	I	R	I	I
17	Steering ball races play												
		Inspect & adjust, if required lubricate for every 5,000 every service or earlier as required. Replace if necessary											
18	Spokes tightness/wheel rim run out front & rear rear (It is applicable for spoke wheel model)	I			I			I			I		I
19	Wheel rim run out front and rear	I			I								
20	Swing arm pivot bush & spacer	I											I
		Inspect & if required lubricate for every 5,000 km or earlier as required. Replace if necessary											
21	Tire wear pattern (front & rear)	I	I		I		I	I	I	I	I	I	I
22	Rear wheel drive chain												
		Clean, lubricate every 1,000 km / clean, lubricate & adjust every 5,000 km or earlier as required											
23	Rear wheel cush drive rubbers						I&R				I&R		
24	Front & rear brake hose & banjo bolt	I	I		I		I	I	I	I	I	I	I
25	Brake fluid level, front & rear disc	I	I		I		I	R	I	I	I	I	I
26	Clutch lever / cable free play												
		Adjust every 1,000 km or earlier as required & replace if required											
27	Hand levers & foot levers												
		Lubricate every 1,000 km or earlier as required.											
28	Pivot side stand, center stand, pillion foot rest, gear shifter, brake pedal, levers	L	L		L		L	L	L	L	L	L	L
29	Throttle cable												
		Adjust every 5,000 km or earlier if required											
30	Brake pads - front & rear	I	I		I		I	I	I	I	I	I	I
31	Side stand switch operation	I	I		I		I	I	I	I	I	I	I
32	All mounting fasteners in vehicle for tightness	I	I		I		I	I	I	I	I	I	I
33	Throttle body - cleaning	Throttle body should be removed from the vehicle and cleaned with a dry microfibre cloth, usage of throttle body cleaners or any similar solvent or alcohol based liquids for cleaning is strictly prohibited, Throttle body cleaning every 10,000 km / 12 months or earlier as required..											